


**NOTE:**

IF CLEANOUT IS INSTALLED UNDER DRIVEWAY OR WALK, IT MUST HAVE SOLID FRAME AND BOLT DOWN LID.

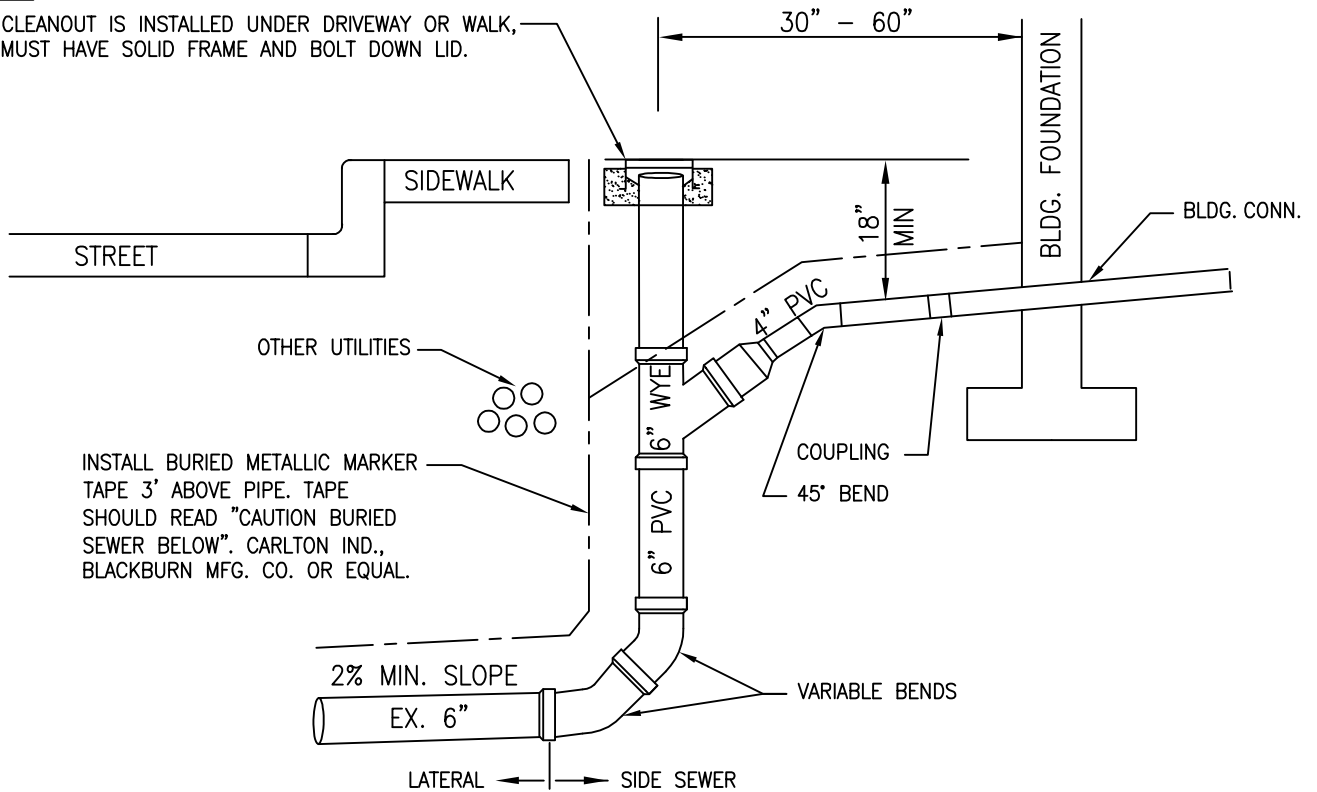


INSTALL BURIED METALLIC MARKER TAPE 3' ABOVE PIPE. TAPE SHOULD READ "CAUTION BURIED SEWER BELOW". CARLTON IND., BLACKBURN MFG. CO. OR EQUAL.

**NOTES:**

THIS METHOD MAY ONLY BE USED WITH PRIOR APPROVAL FROM THE DISTRICT AND ONLY WHEN STANDARD SIDE SEWER INSTALLATION PER DWG SS-1, OR SS-2 ARE NOT POSSIBLE BY EITHER:

1. CUTTING THE SIDE SEWER STUB BACK, ENABLING THE PIPE TO BE INSTALLED AT 100%, (45°, 1:1), OR LESS SLOPE (2% MIN) TO THE BLDG. CONNECTION  
-OR- LOCATED 30" FROM FOUNDATION AT MINIMUM OF 18" DEEP.
2. ROUTING THE SIDE SEWER PIPE TO EXTEND ALONG THE SIDE OF THE BUILDING TO DECREASE SLOPE.

 <b>ALDERWOOD</b> WATER & WASTEWATER DISTRICT	
<b>ALTERNATE SIDE SEWER INSTALLATION</b>	
DATE: 11-2015	DWG. SS-3
APPROVED BY: _____ DLH _____ DISTRICT ENGINEER	